





## How to attach the Anti-virus & Anti-bacterial Film


1. Clean up the surface carefully with a cloth, etc. Align the film with the touchscreen on the short edge. Press the center of the aligned edge to fix the position as shown in the picture.

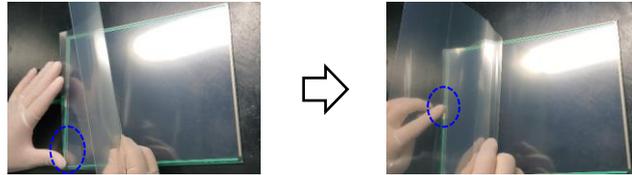


2. After finishing step 1, attach the whole side of the short edge by applying pressure from the center towards the directions as marked in the picture.

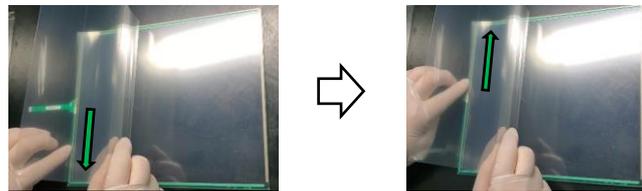


3. To avoid air bubbles, while holding down the short edge that was first attached, peel off the protective film slowly towards the other side of the touchscreen, allowing the anti-virus & anti-bacterial film to be attached to the touchscreen by its weight.

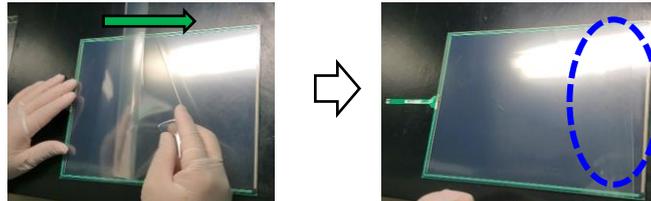

4. Press the center of the unattached area with the thumb as shown in the picture.

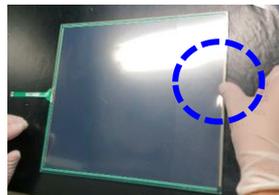

5. Finally, after finishing step 4, slowly apply pressure towards the directions as shown in the picture to attach the whole film and touchscreen surfaces, then remove the protective film on the front side.

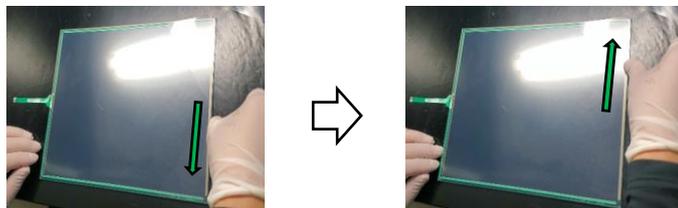

\*\*If the touchscreen is a resistive type, removing the protective film should be done by peeling it off slowly in the horizontal direction, in order to avoid the ITO film from being stressed. If it is peeled off strongly and rapidly in the vertical direction, the ITO film could be distorted.

Please also click [here](#) for the video (Youtube) on how to attach the FV film onto the touchscreen.